

Bitá USB Linker User Guide



Embroidery systems

Sadeghpour electroinic team

Tel : +98 9121216794

Quick Start

in first step take adaptor and then connect it to power and then connect jack of adaptor to BITA USB Linker

Turn off machine and BITA USB Linker
Then connect cable to machine and then to BITA USB Linker



Now connect usb flash disk to BITA USB Linker



Now power on the device

Now you can see list of files and folders that exist in root of your flash disk,so with "Up" and "Down" key you can move between your files and with hint "Enter" key you can select a "Dst" file for send to machine or change directory to selected directory

note that ">" character is pointer that point to current file(or directory) that indicate which file will be selected when you press "Enter" button.

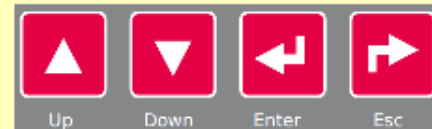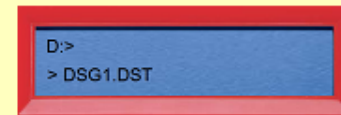

now if you in previous step selected a design file,now you will see some useful information about selected design in below manner :

S : number of stitches



C : number of colors

X,Y : **Size of Designe in mm**

now if you press enter key,Bita usb linker will wait until you make your machine ready for receving embriodery design

now if your machine was ready for receive desing,device will start sending process,otherwise it will waiting for machine

note you can cancel this process by pressing "Esc" key during sending process

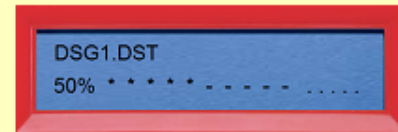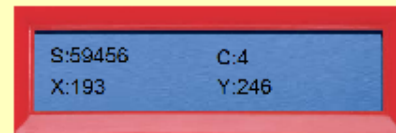


Setting

Setting make BITA USB Linker flexible to connect to every kind of embroidery machine That can use Tjima DST format.

1- For setting turn OFF BITA USB Linker

2- Pres ESC & Up key Simultaneous and then turn ON BITA USB Linker to LCD display Something. then release That keyes.

3- Now you can select your choice. Serial or paralell Or setting. Serial is for machne like tajima FGN or Tajima FX type 5 or BARUDAN and so Parallel is for tajima old machine like TMEG & TMFD & TMFH and so Setting display your previuse setting.

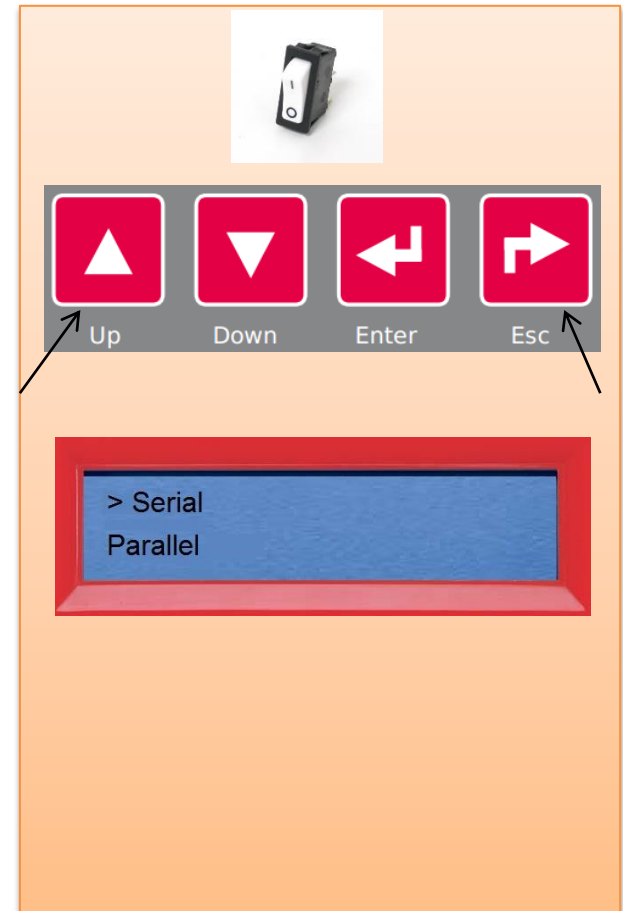

Setting for Tajima FGN

1- Select Serial and then press Enter Key

2-Select “Hardware” with Up or Down key and press Enter

3- Select Serial speed 38400 then press Enter Key

4- Select DATA Bit 8 then press enter

5- Select 2 StopBit and then press Enter

Now Bita USB Linker is ready for tajima TFGN



Setting for tajima old machine in Parallel mode


1- For setting turn OFF BITA USB Linker

2- Press ESC & Up key Simultaneous and then turn ON BITA USB Linker to LCD display Something. then release That keys.

3-Select Parallel with Up & Down Key and press Enter.

4- Select Parallel speed 700 and then press enter.

Now BITA USB Linker is ready for Tajima old machine In parallel mode.

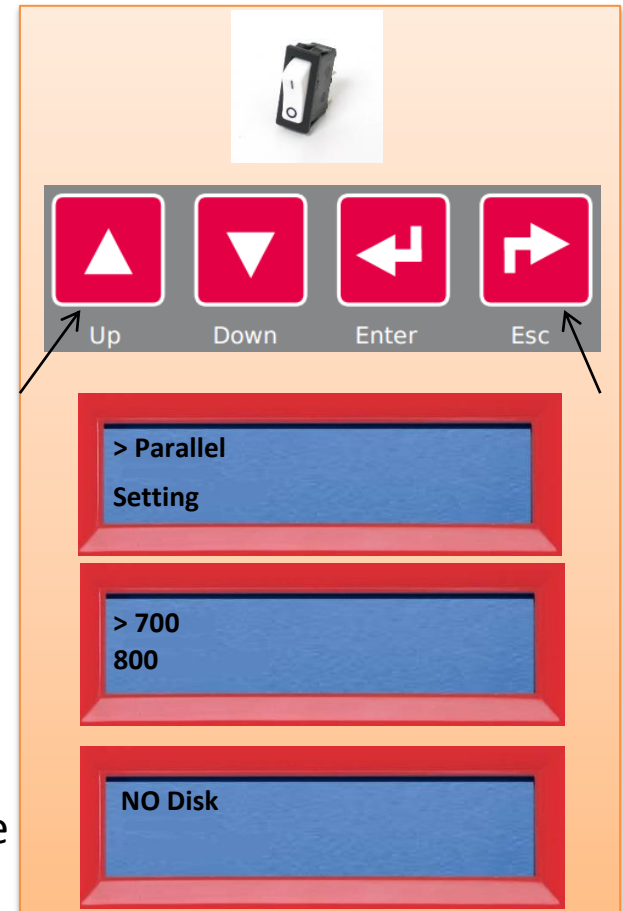



Embroidery systems

Sadeghpour electroinic team

Tel : +98 9121216794